

APU & ENGINE START

MDC	BAT	BAT	MDC	BAT	MDC
APU VALVE WARN	APU OIL * FUEL WARN	APU CTRL	APU START CTRS	APU EMERG STOP	STARTER ON * ENG IGN CTRL
MDC	MDC	MDC	MDC	MDC	MDC
START * CONT IGN A CTRL	ALL IGN A *CONT IGN A 2-5	CONT IGN A 1-4	START * CONT IGN B CTRL	ALL IGN B *CONT IGN B 1-4	CONT IGN B 2-3

MODE 1 MODE 3/A/B

1 2 MODE C D

CIVIL MIL 1/P


OFF 3/A B

SBY LOW NORM

EMGY PUSH

I F F / S S R

T/R	T/R	R	S	R	N
		TACAN		ICS/MER	RVR
T/R		R	R		
		S	S/NT		CIVIL MODE EMERGENCY
T/R	T/R	R	S		
STBY/VHF		STBY/UHF	ADF		NORMAL

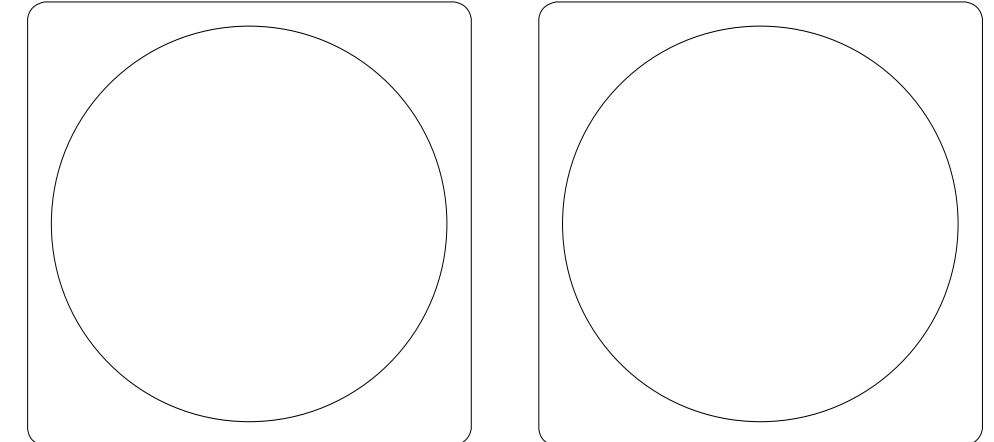

SPK EMG MKR DME NAV1 NAV2 FILT VOL

VHF1 VHF2 FM1 FM2 FM3 ADF FILT H'MIC

VHF1 VHF2 FM1 FM2 FM3 RAM ICS XMIT

AUDIO AUDIO

ROLL

OFF

CHART LT

OFF PTT

PANEL LTS

HEADSET BOOM HEADSET MICROPHONE

T A C

OFF REC T/R TST

PSN OFF TSN

FREQ-Nc/s

IC

P T T

XPDR

P3 RT INT

PUSH CALL

CABIN PHONE HF1 HF2

U/VHF HF/VHF U/STBY OFF PRIV I/C Vol

ON ALL I/C

MAX

M I L

CADC

COMM PRESET NORMAL CORR OFF

ENGINE START L ON R

OFF

ENGINE MASTER L ON R

OFF

RUDDER TRIM L R

I D L E

O F F